



CONNECTOR  
250 SERIES

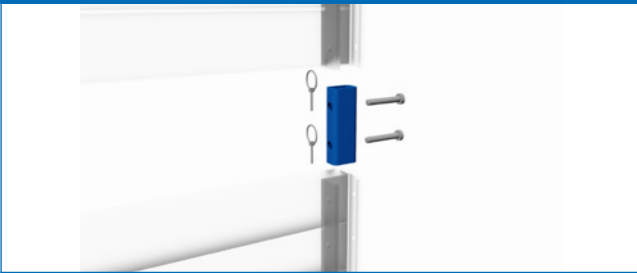

Connects two shoring plates

RELEASE HOOK  
260 SERIES

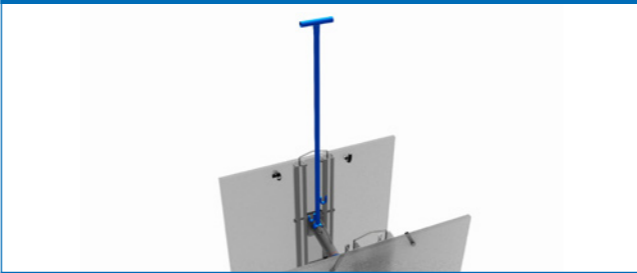


Releases the hose's quick coupling to the pump on the support

4-FOLD CHAIN WITH SHORTENING SYSTEM




Transporting, inserting and removing shoring boxes

SPINDLE KEY

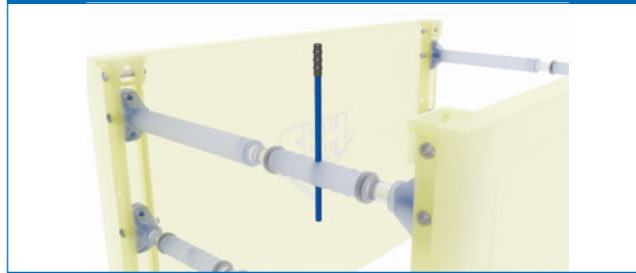

Adjusting of spindles

4-FOLD ROPE  
250 SERIES

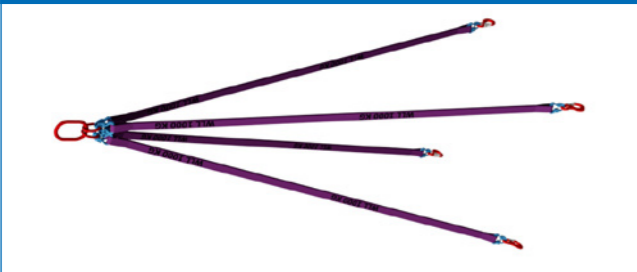


Transporting, inserting and pulling out aluminium shoring

PIPE HOOK  
260 SERIES




Draining the frame in the trench

PROTECTION RAIL  
600 AND 700 SERIES

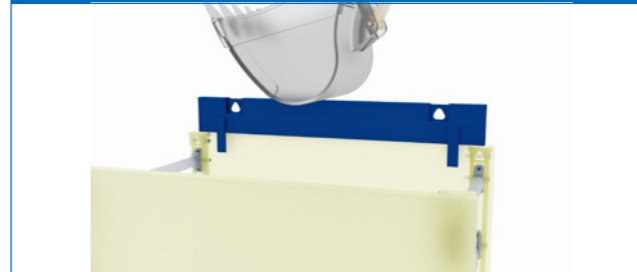

Protects shoring plates when pressing them in

BOX CONNECTOR  
300 AND 600 SERIES

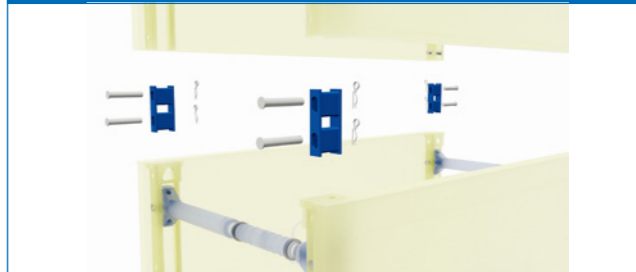


Connects base and extension plates

PROTECTION RAIL  
100 AND 300 SERIES




Protects shoring plates when pressing them in

ADAPTOR PIECE FOR SPINDLES  
300 AND 600 SERIES

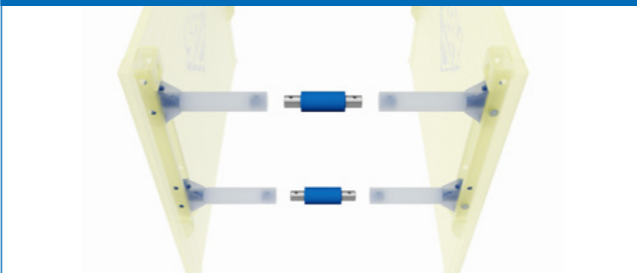

Replacement for spindle element; rigid spindle

STOPPING PAD  
400 SERIES

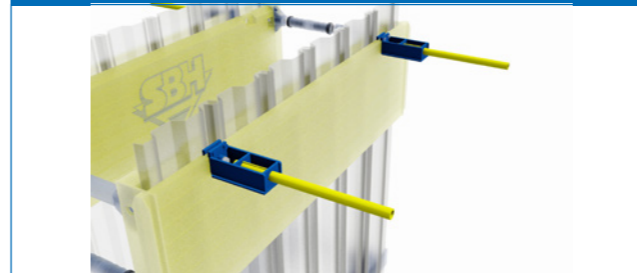

Holds the pile chamber plates securely in place

WALER FOR PILE CHAMBER PLATES WITHOUT SLIDE RAIL GUIDE



HEB240 without guides with attachment points

PROTECTIVE DRIVING CAP  
300 AND 600 SERIES



Protects shoring plates when pressing them in

SPINDLE LIFTING ATTACHMENT  
300 AND 600 SERIES



Transporting spindles

CONNECTOR POST WITH SLIDE RAIL GUIDE  
400 SERIES




Connects pile chamber plates to form a manhole

WALER FOR PILE CHAMBER PLATES WITH SLIDE RAIL GUIDE



Type 1, with guide for external pile chamber plates with attachment points

SPRING SPINDLE HOLDER SOCKET

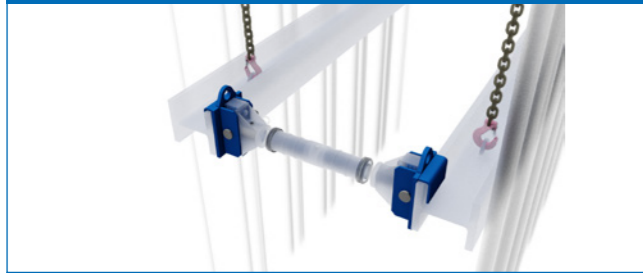


Mounting and extending the spindles on the walers

WALER FOR PILE CHAMBER PLATES WITH SLIDE RAIL GUIDE




Type 2, with guide for internal pile chamber plates with attachment points

CLAMPING DEVICE  
750/790 SERIES

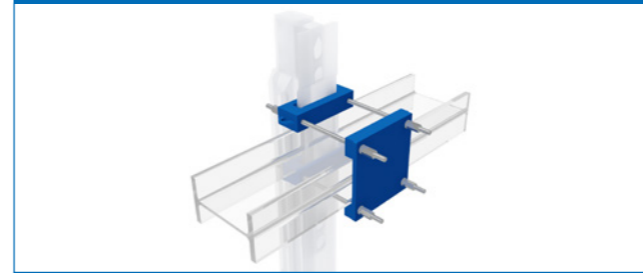

Rear anchoring of the slide rails to the walers

SPANNER  
750/790 SERIES

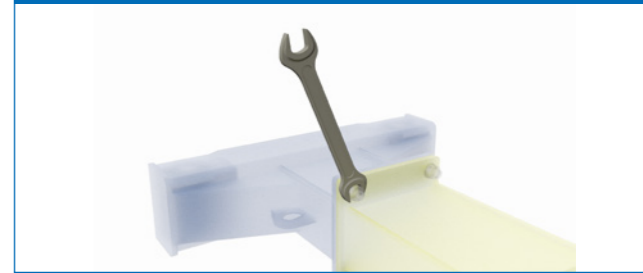


Tightening and loosening screw connections M30

PROTECTION RAIL WITH CONNECTOR  
700 SERIES




Protects shoring plates when pressing them in

ASSEMBLY HELP FOR DOUBLE SLIDE RAIL  
750 SERIES

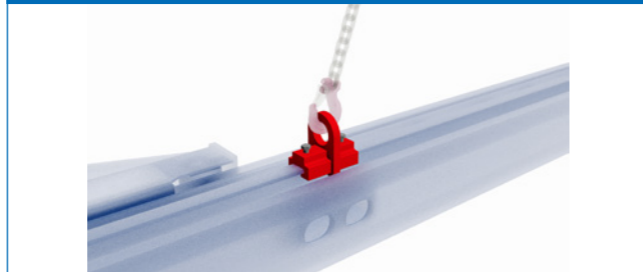

Transporting slide rails and fitting to frames

CLAMPING DEVICE

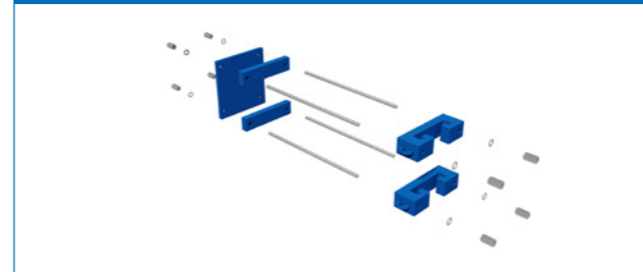


Rear anchoring of the slide rails to the walers

EXPANSION PANEL




Closing off a 90° bend in the course of the trench (district heating lines)

UPLIFT PROTECTION  
100 AND 300 SERIES

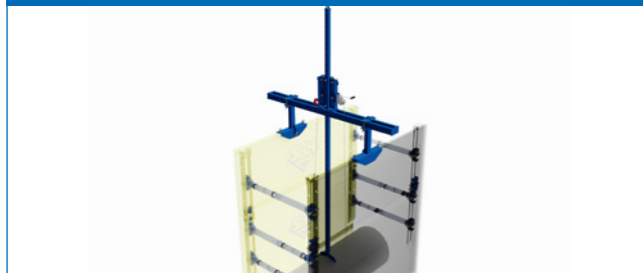


Fixes the pipes when used with liquid soil

ASSEMBLY HELP FOR SINGLE SLIDE RAIL  
790 SERIES

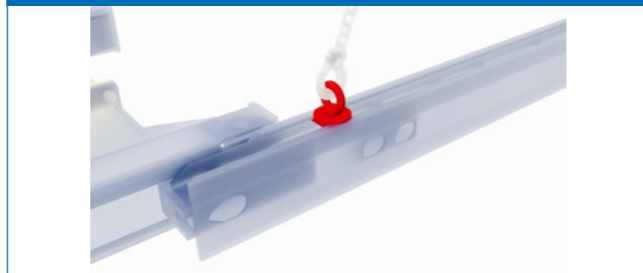


Transporting slide rails and fitting to frames

LOWERING HELP  
750 SERIES

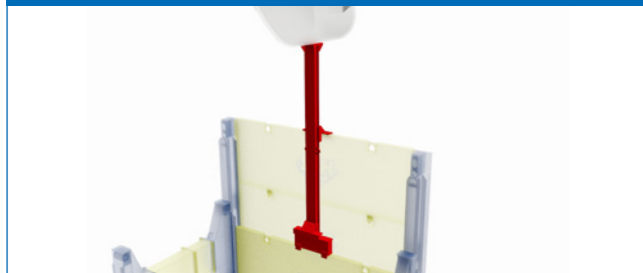

Lowering aid for slide rail shoring plates, inner guide

INSTALLATION DEVICE

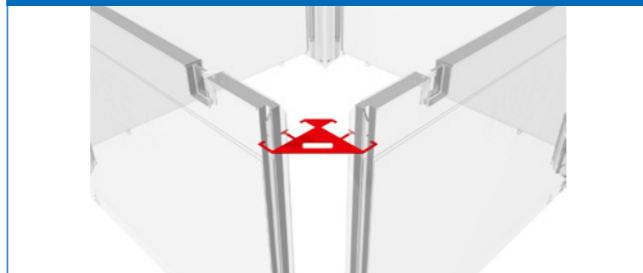

Setting the final corner slide rail of a pit

